

## Maintenance Reminder Lights - Hummer

**CHANGE OIL SOON INDICATOR**

**NOTE:** Most vehicles are equipped with a Malfunction Indicator Light (MIL) or check engine light. If light comes on and remains on while driving, the vehicle requires some type of repair. See appropriate service and repair information. After repairing fault(s) and clearing fault code(s), the MIL or check engine light should go out. Some models may use a dual-function indicator light, which is also used to indicate emission component service is due. After performing required service, reset indicator light.

**NOTE:** This article is only to be used for resetting maintenance reminder lights (when applicable). Some models (not all) may be equipped with one or more resettable maintenance reminder lights indicating maintenance is required. Once required maintenance services are performed, resetting of lights may be required. Information is provided to reset these lights where applicable.

**2003 H2**

1. The Oil Life System will show when to change the engine oil and oil filter. This will usually occur between 3000 and 7500 miles since the last oil change. Under severe conditions, the indicator may come on before 3000 miles. The system will not detect dust in the oil. Reset the system when the oil has been changed.
2. To reset oil life system, turn ignition ON, with engine OFF. Fully push and release the accelerator pedal slowly 3 times within 5 seconds. If the CHANGE OIL SOON light flashes, the system is resetting. Turn ignition OFF. Start engine and all to idle. The oil life will change to 100 percent. If the CHANGE OIL SOON indicator comes back on, the system has not reset. Repeat the procedure.


**2004 H2**

The vehicle has a computer system that has a change engine oil light, indicating when to change the engine oil and filter. See **Fig. 1**. This is based on engine revolutions and engine temperature, and not on mileage. Based on driving conditions, the mileage at which an oil change will be indicated can vary considerably. For the oil life system to work properly, the system must be reset every time the oil is changed.

When the system has calculated that oil life has been diminished, it will indicate that an oil change is necessary. The change engine oil light will come on. The oil must be changed as soon as possible. It is possible that, if the vehicle is driven under the best conditions, the oil life system may not indicate that an oil change is necessary for over a year. However, the engine oil and filter must be changed at least once a year and at this time the system must be reset. If the system is ever reset accidentally, the oil must be changed at 3000 miles since the last oil change. **www.4x4us.net** Reset the oil life system whenever the oil and filter is changed. **www.4x4us.net**

1. Press the fuel information button until Engine Oil Life appears on the screen.

2. Press and hold the reset button for 5 seconds.
3. OIL LIFE RESET will appear on the screen for 10 seconds.
4. The oil life system is reset.

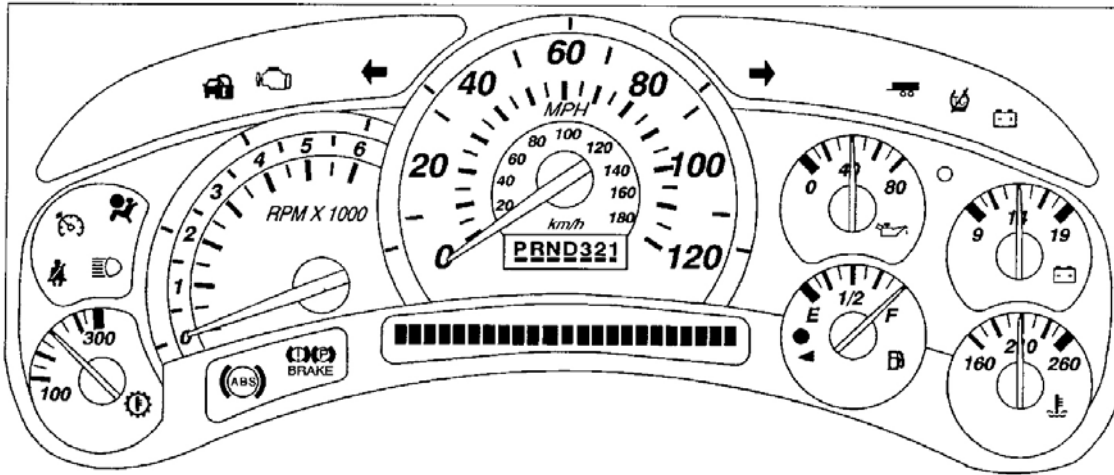

G00275777

**Fig. 1: Identifying Instrument Cluster (2004 H2)**  
Courtesy of GENERAL MOTORS CORP.